



TOWEL WARMER

MANUALE D'USO

USER'S MANUAL

MANUEL D'INSTRUCTIONS

GEBRAUCHSANLEITUNG



Dear Customer,

Thank you for choosing to buy the **TOWEL WARMER**. We hope that you will be fully satisfied by your choice of product.

The **TOWEL WARMER** model is a professional "stove" designed to warm towels.

Copyright

All rights reserved. Reproduction of any part of this manual in any form whatsoever, without the prior written permission of XANITALIA srl is strictly prohibited. The contents of this manual may be modified without prior notice. While all care has been taken to ensure the correct nature and completeness of the documentation contained in this manual, XANITALIA srl accepts no liability for its use. This condition also applies to all companies involved in the creation and production of this manual.

Published by: XANITALIA srl, via Divisione Acqui, 53 - 61122 Pesaro - ITALIA

DECLARATION OF CONFORMITY

Manufacturer's Name: XANITALIA srl Manufacturer's Address: Via Divisione Acqui, 53 61122 Pesaro

hereby declares that the following product:

Mod. TOWEL WARMER

conforms to the following Directives and Standards:

Directive 2014/35/EU EN 60335-1 EN 60335-2-23 EN 62233

Directive 2014/30/EU EN 55014-1 EN 55014-2 EN 61000-3-2 EN 61000-3-3

Directive 2011/65/EU EN 50581

April 2016 Franco Signoretti Managing director XANITALIA srl

Important safety instructions

Read these instructions with care before using the TOWEL WARMER.

Before using this product, read these instructions with care. The manufacturer will accept no liability for any damage to people or property that derives from failure to respect the warnings and instructions contained in this booklet.

The guidelines given in this booklet explain the first-time operation, use and correct maintenance of the product. Follow these indications to guarantee the durability and electrical and mechanical reliability of the product. Keep this instruction booklet for later reference.

Never use the product for anything other than its intendeduse, which is stated in this booklet.

After removing the product from its packaging, check that it is complete and in the event of any doubt, contact a qualified technician. Keep packaging out of the reach of children or incapable persons.

If the product should fall or receive any hard knocks, it must immediately be checked by the manufacturer or by an authorised Technical Assistance Centre.

The use of any electrical appliance requires that several basic rules be observed. These include:

- never touching the appliance when hands are wet or humid;
- never touching the appliance when feet are bare;
- never leaving the appliance within reach of children or incapable persons.

Connect the product to the power supply/plug socket only if:
• the electrical data for the main supply corresponds to those on the appliance rating plate;

• the capacity of the power supply installation/plug socket is sufficient for the maximum power of the appliance. If this is not the case, contact a qualified technician.

In the event that the appliance plug is not compatible with the plug socket, this latter must be replaced with a suitable socket by a qualified technician.

Never use worn or damaged power cables. If the power



cable becomes damaged in any way, it must be replaced by the manufacturer or by an authorised Technical Assistance Centre or in any case, by similarly qualified technicians, in order to prevent any risks.

In general, the use of adapters, multiple sockets and/or extension cables, is not advised. In the event that it is necessary to use such items, only use single or multiple adapters and cables that comply with the safety regulations in force. Take care not to exceed the limit capacity for the current as shown on the adapter or cable and the maximum power level shown on the multiple adapter.

Do not leave the appliance switched on when not in use: switch off the main switch.

Always unplug the from the mains supply before carrying out any cleaning or maintenance operations.

In the event of incorrect operation and/or failure, switch off the appliance and contact the manufacturer or an authorised Technical Assistance Centre immediately. Should repairs become necessary, always request that original replacement parts be used.

When no longer required, switch off the appliance and unplug it from the main supply.

Then store it out of reach of children or incapable persons.

The electrical system to which the product is connected must comply with the relevant legal requirements for domestic wiring systems.

This device may be used by children of 8 years and upwards and persons with reduced physical abilities under supervision or if they have received instruction in the safe use of the device and understand the dangers it implies. The cleaning and servicing operations assigned to the user must not be carried out by children unless they are over 8 years of age and are properly supervised. Keep the device and its power cable out of reach of children less than 8 years of age. Children should not play with the appliance.

Special Warnings

This appliance has been manufactured with good materials and workmanship.

The appliance conforms to the Directive 2014/35/EU and to the Directive 2014/30/EU for the suppression of radio disturbance.

The appliance must be connected to a properly earthed socket.

Do not expose the appliance to atmospheric agents.

The device can only be used for heating towels.

Do not soak the appliance or any of its parts in water or other liquids (unless otherwise specified in the section entitled "Cleaning").

Do not use the appliance in the presence of flammable fumes or substances such as alcohol, insecticides, petrol, etc.

Operation

To use the appliance, connect the mains lead to a 220/230V socket.

Wet the towels thoroughly, wring them out and then roll them up for better positioning inside the appliance.

Remove the basket and place the rolled towels inside.

Replace the basket inside the appliance, taking care that the rolled towels do not touch its interior.

Close the door and check that the drip basin is in place.

Turn on the mains switch.

Once the towels are warm, remove the basket, wearing a protective glove.

WARNING: do not touch the towel rack with your hands.

Technical data

| Model | TOWEL WARMER |
|------------------|----------------------|
| Supply Voltage | 220 - 240 V 50/60 Hz |
| Electrical power | 178 W |
| Capacity | 11 litres |
| Weight | 6 Kg |
| Dimension | mm 410X320X260 h |

Cleaning

Always disconnect the plug from the power socket when cleaning the appliance.

Wait for the stove to cool.

Never use solvents or aggressive detergents, or any type of liquid, when cleaning the body of the appliance.

Empty the drip basin and dry it thoroughly.

Also dry the inside of the stove.

Use a soft cloth to wipe any dirt from the body of the appliance.

Disposal



EU 2012/19/EU (EN) This appliance complies with the EU Directive 2012/19/EU.

The crossed out bin symbol on the appliance means that the product, at the end of its useful life, must be given to a differentiated waste collection centre for electric and electronic equipment or returned to the retailer when the delivery of the appliance to the proper collection facility at the end of its useful life. The appropriate differentiated waste collection forb the treatment, recycling, and disposal of the appliance compatible with the environment contributes to prevent human health and favour the recycle of the materials the product is made of. The unauthorized disposal of the product by the user implies the application the Italian Legislative Decree n. 152/2006 (art. 255 and following amendments of the L. Decree n. 152/2006). For more detailed information about the available waste collecting systems, store where the purchase was made. Buying a new equivalent appliance, since the product must be treated apart from the house waste. The user is responsible for possible negative effects on the environment and of administrative sanctions according to address to the local disposal service or the store where the purchase was made.



EN